

# MOTOROLA PRO+

LIFE.  POWERED.

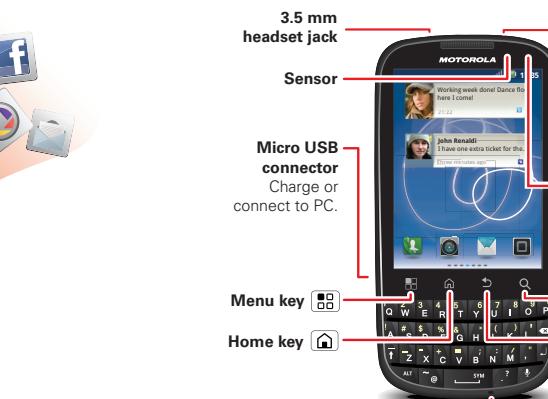
## WELCOME

- Part business, part casual and all smartphone.
- **Speed**—1 Ghz processor for fast web browsing.
  - **Easy viewing**—emails, documents and calendar.
  - **Business ready**—enterprise level security.

Most of what you need is on the touchscreen and four keys on the front:

- **Menu**: Open menu options.
- **Home**: Go to the home screen.
- **Back**: Go back a screen.
- **Search**: touch for text search.

**Note:** Certain apps and features may not be available in all countries.



## YOUR PHONE

Use the **full keypad** for texting, emailing or searching.

**Tip:** To lock the screen, press the Power key . To unlock, press the Power key , then drag  right.

**Note:** Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.



## START HERE

Let's get you up and running.

**Caution:** Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information packaged with your product.

Create or log into a MOTOBLUR account. Use an existing email account and a memorable password—these will become your MOTOBLUR account ID and password. Registration is secure and should only take a few minutes.

**Note:** This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.



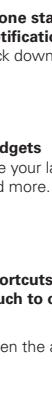
## TOUCH TIPS

It's all in the touch:

- **Touch**: Choose an icon or option.
- **Touch & hold**: Open options.
- **Drag**: Scroll or move slowly.
- **Flick**: Scroll or move quickly.
- **Pinch**: To zoom maps, webpages or photos, slide fingers apart or together.

The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. Add widgets and shortcuts to your home screen to see what's important to you. To make the home screen yours, see "**PERSONALISE**".

**Tip:** Choose your apps carefully, from trusted sites like  Market, as some may impact your phone's performance.



## HOME SCREEN

All your apps, all together:

- **App menu**: To open the app menu, touch  on the home screen. To close the app menu, touch Home  or Back .
- **Want more?**: No problem. To download more apps, touch  >  Market.

The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. Add widgets and shortcuts to your home screen to see what's important to you. To make the home screen yours, see "**PERSONALISE**".

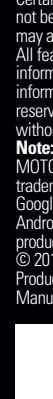


## APPS

Certain features, services and applications are network-dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

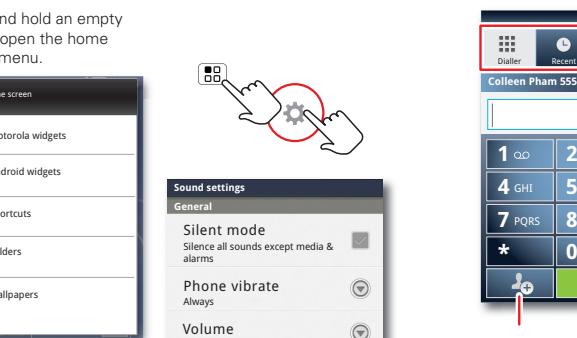
**Note:** The images in this guide are examples only. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, the Google logo, Google Maps, Google Talk, Google Latitude, Gmail, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. All other product or service names are the property of their respective owners. © 2011 Motorola Mobility Inc. All rights reserved. Product ID: MOTOROLA PRO+ (MB632) Manual number: 68004158013



**PERSONALISE**

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone and more—make it yours.

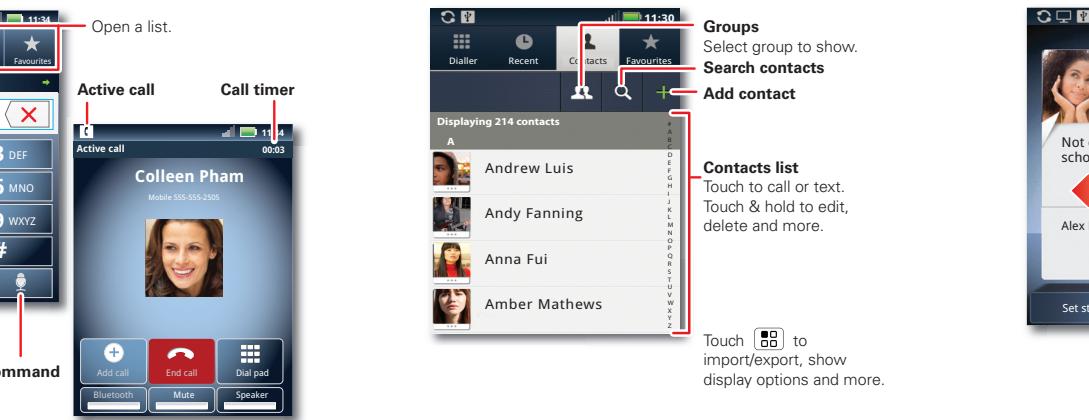
- Home screen:** Touch and hold an empty spot until you see the **Add to Home screen** menu.
- Tip:** To move or delete something, touch and hold it to drag it to a new location or to the bin at the top of the screen.
- Ringtones & sounds:** Touch menu > **Settings** > **Sound**.

**CALLS**

Your dial pad, call lists, contacts and favourites are just a touch or two away — no menus needed. Just touch **Dialler** on the home screen.

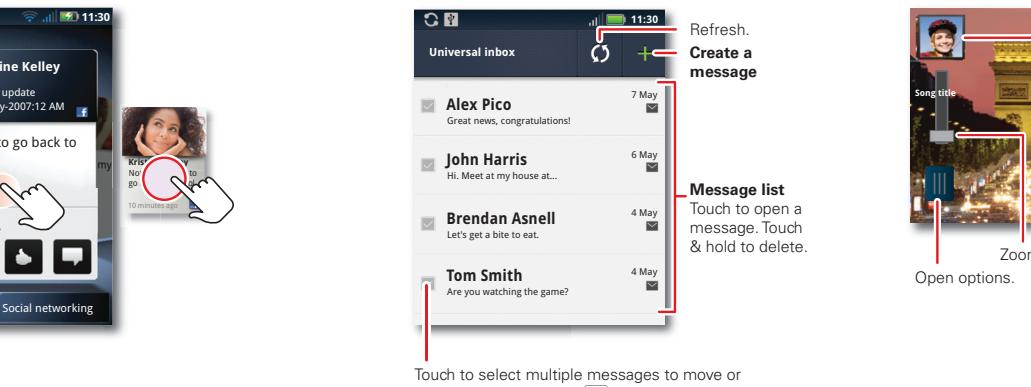
- Tip:** During a call, touch Home or Back to hide the active call display and use other apps. To reopen it, touch **Dialler**.

- Tip:** To move or delete something, touch and hold it to drag it to a new location or to the bin at the top of the screen.
- Ringtones & sounds:** Touch menu > **Settings** > **Sound**.

**CONTACTS**

Contacts like you've never had before, downloaded from your accounts and backed up on MOTOBLUR.

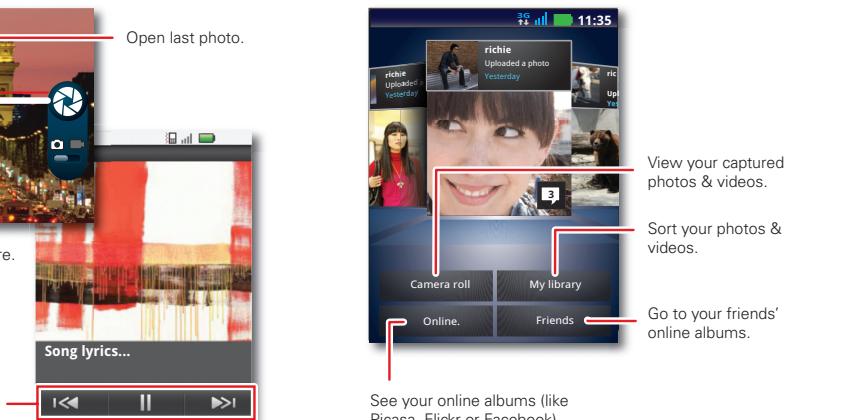
- Tip:** Touch **Contacts** or **Dialler** > **Contacts**.
- Scroll:** Flick or drag the list. Touch a letter on the right (A - Z) to jump to entries.
- Search:** touch to open, then type the contact name.
- More:** To transfer your contacts to your phone, or organise your contacts, go to [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).

**UPDATES**

Find out what everyone is doing. Touch your **Social networking** or **Messages** widgets to see the newest update, then:

- See more:** Flick left to see more updates or messages.
- See details:** touch **Social networking**, then touch the social network's icon for more access.
- More:** To transfer your contacts to your phone, or organise your contacts, go to [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).

**Tip:** To add social network accounts, touch Menu > **Settings** > **Accounts** > **Add account**.

**MEDIA**

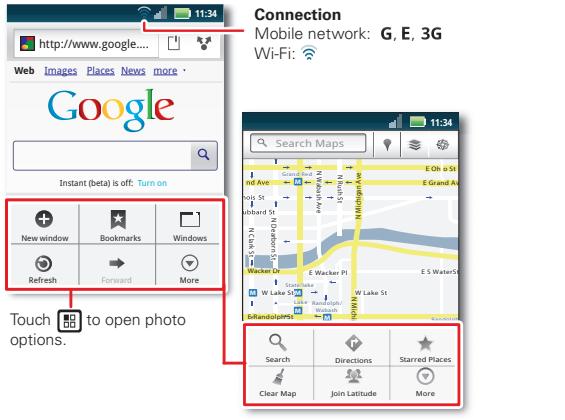
Your photos and videos plus your friends' photos and videos all in one place — text, IM, email, Facebook™ and more. Touch > **Gallery**:

- Universal inbox:** To edit the message types shown in the Universal inbox, touch Menu > **Edit universal inbox**.
- Photos:** Touch **Camera**. To take the photo, touch .
- View:** touch **Camera roll** to see the photos and videos you have taken, or touch **My library** to sort photos and videos by **Albums**, **Locations**, **Tags** or **Timeline**.
- Tip:** To add email and Gmail™ accounts, just touch Menu > **Settings** > **Accounts** > **Add account** and follow the instructions.

**Rich web content:** With Adobe® Flash™ Player 10.1 support you can access your favourite websites.

**Music:** Touch > **Music**, then touch a category. Play your songs or listen to an online radio station.

**Maps:** Touch > **Maps** to use the Google Maps™ you know and love. With built-in GPS, you'll have pinpoint turn-by-turn navigation all the way.

**WEB & MAPS**

See it, capture it, share it! You'll even have time to relax to some music.

- Answers:** Touch > **Help centre**. You can also flick your home screen left or right to see the Getting started and Tips & tricks widgets.

**Bluetooth™ :** For hands-free calls and wireless music, touch Bluetooth settings and connect to your accessory.

**Browser:** Touch > **Browser** and surf to your heart's content.

**Support:** Phone updates, PC software, user guides, online help and more at [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).

**MOTOBLUR:** After you create a MOTOBLUR account, open it at [www.motorola.com/mymotoblur](http://www.motorola.com/mymotoblur).

**Accessories:** Find optional accessories for your phone at [www.motorola.com/products](http://www.motorola.com/products).

**WIRELESS**

Lose the wires—touch Menu > **Settings** > **Wireless & networks**.

- Answers:** Touch > **Help centre**.

You can also flick your home screen left or right to see the Getting started and Tips & tricks widgets.

**View:** touch **Camera roll** to see the photos and videos you have taken, or touch **My library** to sort photos and videos by **Albums**, **Locations**, **Tags** or **Timeline**.

**Tip:** To add email and Gmail™ accounts, just touch Menu > **Settings** > **Accounts** > **Add account** and follow the instructions.

**Rich web content:** With Adobe® Flash™ Player 10.1 support you can access your favourite websites.

**Music:** Touch > **Music**, then touch a category. Play your songs or listen to an online radio station.

**Maps:** Touch > **Maps** to use the Google Maps™ you know and love. With built-in GPS, you'll have pinpoint turn-by-turn navigation all the way.

**MORE**

Want more? You got it:

- Answers:** Touch > **Help centre**.

You can also flick your home screen left or right to see the Getting started and Tips & tricks widgets.

**View:** touch **Camera roll** to see the photos and videos you have taken, or touch **My library** to sort photos and videos by **Albums**, **Locations**, **Tags** or **Timeline**.

**Tip:** To add email and Gmail™ accounts, just touch Menu > **Settings** > **Accounts** > **Add account** and follow the instructions.

**Rich web content:** With Adobe® Flash™ Player 10.1 support you can access your favourite websites.

**Music:** Touch > **Music**, then touch a category. Play your songs or listen to an online radio station.

**Maps:** Touch > **Maps** to use the Google Maps™ you know and love. With built-in GPS, you'll have pinpoint turn-by-turn navigation all the way.

**SAR**

This product meets the applicable SAR limits of 1.6 W/kg (FCC) and 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.

**Note:** When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.